

## Technical Information / Datasheet

### SK TIE4-M12-INI

Part number: 275 274 503

Connection extension for initiators and actuators

M12 control system connector

#### Scope of delivery

1 x	M12 Socket connector	SK TIE4-M12-INI
1 x	Cover cap	black

As-delivered status with screwed-on connector cover



#### Field of use

The M12 Socket connector has open cable ends and wire end sleeves. It is used to make a pluggable connection using normal commercial M12 round plug connectors. It connects the technology option with the outgoing control signal cable at the output side.

#### Technical data

Version	
Temperature range	-30 ... +90 °C
Contact insert Colour / Material	Black / RAL 9005 Plastic
Round plug connector Material	Metal, CuZn, nickel plated
Connection / Type Round plug connector	M12x1, adjustable Socket connector with flexible strand M16x1.5, metric screw thread
Contact set Contacts / Coding	5 pin, A - coded

Weight	23 g
Connector cover Colour / Material	Black / RAL 9005 Plastic
Protection class (screwed)	IP67
Fastening	Hexagonal nut M16x1.5 *
Tightening torques * M12x1 Socket connector M16x1.5 Screw thread	0.6 Nm 1.5 Nm


\* Suitable assembly spanner commercially available (see Installation)

Cable	
Number of conductors / Cross section	4 x 0.34 mm <sup>2</sup>
Wire strands / colours	UL / (br, wt, bl, bk)
Length of wire strands	250 mm
Degree of fouling	3 / 2

Mech. Service life	min. 100 plugging cycles
Operating voltage	max. 250 V
Current rating	4 A
Insulation resistance	≥ 10 <sup>8</sup> Ω




Connection extension				SK TIE4-M12-INI	
1.1	Extensive revision	2414	Bch	TI 275274503	EN
version	reason for change(s)	issue	name	document	speech

### Circuit diagram

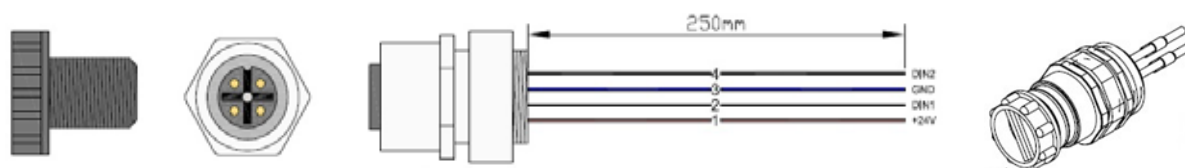

### Installation / option locations

The M12 Receptacle connector are intended for direct installation in a free M16 hole / threaded opening of the device series (see below).

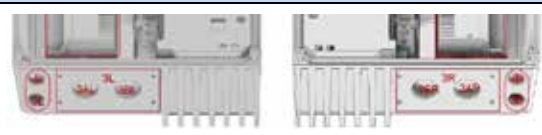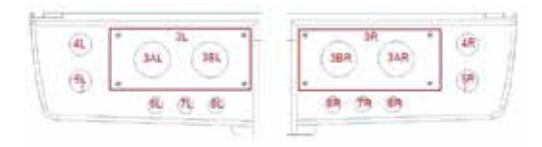


Device series	Recommended option location	Option locations
<b>SK 135E *</b> <b>SK 180E * ... SK 190E *</b> Housing SK 1xxE xxx-xxx-x (-C)	4R / 4L (incoming) 5R / 5L (outgoing)	
<b>SK 200E</b> Frequency inverter connecting unit SK TI4-x-2xx-x (-C)	4R / 4L (incoming) 5R / 5L (outgoing)  optional ** 6R / 6L, 7R / 7L, 8R / 8L	
<b>BUS technology box</b> BUS connection unit SK TI4-TU-BUS (-C)	1 / 2 / 3 / 4  optional *** 5R / 5L	









\* The configuration capability of the respective Receptacle connector depends on its functionality with regard to the device series, e.g. the SK TIE-M12-SH Socket connector cannot be installed with the SK 1xxE housing.  
 \*\* Size 1 – 3 with optional SK TIE4-M12-M16 connection extension, size 4 direct installation  
 \*\*\* With optional SK TIE4-M20-M16 connection reduction

The installation position and mounting location (coding pin or coding groove on contact carrier) of the Socket connector is freely positionable and should be aligned (see installation step 6) such that angled M12 round connectors can also be connected in a way that avoids collisions.

The installation steps described in the following apply to the installation of the M12 Receptacle connectors in the housing and in the frequency inverter connecting unit or the BUS connecting unit of an external technology box.

#### Installation steps for installation of the M12 Receptacle connector

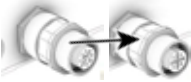1.	Remove M16 blind plug at the provided option location side (right / left) of the starter or frequency inverter housing or the connection unit.	
	Remove M16 blind plug from the provided option location hole (bottom) of the BUS connection unit.	
2.	Screw the middle hexagonal nut towards the front using a size 17 open-ended spanner.	

3.	<p><b>EMC</b> Twist associated wire pairs together (e. g. bus system, power supply, etc.).</p>		
4.	<p>Screw M12 flanges component directly into the affected M12 threaded opening of the housing or connecting unit of the frequency inverter. Screw M12 Receptacle connector into the relevant M16 threaded opening of the BUS connecting unit.</p>		
<p><b>Alternative option locations</b> Connection extension <b>SK TIE4-M12-M16</b> The M12 Receptacle connector can alternatively be installed with an <b>optional</b> M12-M16 connection extension. First screw the M12 Receptacle connector directly into the connection extension and then fit into the M12 threaded opening in the connection unit. For more information see Optional accessories</p>			
<p>Connection reduction <b>SK TIE4-M20-M16</b> The M12 Receptacle connector can alternatively be installed with an <b>optional</b> M20-M16 connection reduction. First screw the M12 Receptacle connector directly into the connection reduction and then fit into one of the side M12 threaded openings in the connection unit. For more information see Optional accessories</p>			
5.	<p>Align coding pin / coding groove vertically to 12 o'clock by rotating the front hexagonal nut.</p>	<p>Socket connector</p> 	<p>Plug connector</p> 
6.	<p>Secure the front hexagonal nut with a 17 mm open-ended spanner. Screw the rear hexagonal nut to the connection unit or the starter or frequency inverter housing using a size 17 open-ended spanner or a special torque / installation wrench. Take the specified <b>tightening torques</b> into consideration, see technical data.</p>		
7.	<p>Ensure that the M12 round plug connector or the cover cap is properly screwed onto the M12 Receptacle connector and tightened.</p>		

**NOTICE**

**Corrosion**

Pay attention to leaktightness during the installation of all components (assembly, connection extension etc.). It must be ensured that all components are correctly seated and the tightening torques are adhered to when doing this.

In order to ensure that protection class **IP66** is complied with (concerns all devices with type key SK ...-C), another **pressure - leaktightness test** must be performed when the assembly work has been completed.

Failure to do this will allow moisture to penetrate the device, which will result in the risk of corrosion and short circuiting.

**i Information**

**Torque / assembly wrench**



In order to provide a secure, sealed and vibration-proof connection, the M12 connection extensions, which are equipped with a hexagonal threaded ring (size 17), should be tightened with special torque / assembly wrenches. For professional installation NORD recommends the use of commercially available assembly tools (M12, size 17) with an adjustable, defined tightening torque (e.g. from Murrelektronik).

**Connections**

The open cable ends of the connection extension / M12 Socket connector are connected to the terminal strip of the BUS connection unit (technology box), the customer interface or the control terminal strip in the frequency inverter or motor starter (see below).



<b>Frequency inverter and motor starter</b>	<b>BUS connection unit</b> SK TI4-TU-BUS (-C)	<b>Technology box</b> SK TU4-... (-M12) / (-C)	<b>Customer interface</b> SK CU4-...
---	--	---	---

**Electrical connections**



**Connection extension**  
**M12 Socket connector**  
**SK TIE4-M12-INI**

**Connection terminals\*\*\***  
**SK 1x5E,**  
**SK 180E ... SK 190E,**  
**SK 2xxE**

**Technology box**  
**SK TU4-... (-M12) / (-C)**  
**Connection unit**  
**SK TI4-TU-BUS (-C)**

**Customer interface**  
**SK CU4-...**

Initiators	Pin	Colour	Signal	Contact	Designation	Contact	Designation	Contact	Designation
	1	brown		+24 V	43/44 **	24 V	11/12	24 V	44
2	white		DIN 1-4	21-24	DIN1-4	19/20/25/26	DIN 1-4	C1/C2	DIN 1-4
3	blue		GND	40	GND	15/17	GND	40	GND Bus
4	black		DIN 1-4	21-24	DIN 1-4	19/20/25/26	DIN 1-4	C1/C2	DIN 1-4

Actuators*	Pin	Colour	Signal	Contact	Designation	Contact	Designation	Contact	Designation
	1	brown		+24 V	43	+24 V	44	24 V	31/32
2	white		DOUT 1	1	DOUT 1	1	DOUT 1	33	DOUT 1
3	blue		GND	40	GND	40	GND	35/36	0 V
4	black		DOUT 2	3	DOUT 2	3	DOUT 2	34	DOUT 2

\* Only possible with series SK 2x0E devices

\*\* 43: 24 V internal, SK 2x0E; 44: 24 V external, SK 2x5E

\*\*\* For series SK1xxE devices: Replace existing pin fork terminals with 8 mm wire end sleeves, otherwise secure contact cannot be guaranteed over the long term.

Contact assignments  
4-pole  
**Socket connector**  
A - coded



Optional accessories

**i** Information

**M12 / M20 screw openings**



Conductive connection extensions made from brass SK TIE4-M12-M16 from M12 to M16 or connection reductions SK TIE4-M20-M16 from M20 to M16 are optionally available for installing the M12 connection extensions in an M12 or M20 screw opening. For more information, see further documentation.

Further documentation ([www.nord.com](http://www.nord.com))

Document	Designation
<a href="#">BU 0135</a>	Motor starter manual SK 105E ... SK 175E
<a href="#">BU 0180</a>	Frequency inverter manual SK 180E, SK 190E
<a href="#">BU 0200</a>	Frequency inverter manual SK 2xxE
<a href="#">TI 275280000</a>	Bus connection unit SK TI4-TU-BUS
<a href="#">TI 275280500</a>	Bus connection unit SK TI4-TU-BUS-C
<a href="#">TI 275274510</a>	Connection extension SK TIE4-M12-M16
<a href="#">TI 275274511</a>	Connection reduction SK TIE4-M20-M16
<a href="#">TI 275271010</a>	Electronic brake rectifier, SK CU4-MBR
<a href="#">TI 275271011</a>	Setpoint converter, SK CU4-REL
<a href="#">TI 275271006</a>	IO extension SK CU4-IOE
<a href="#">TI 275281106</a>	IO extension SK TU4-IOE
<a href="#">TI 275281156</a>	IO extension SK TU4-IOE-C
<a href="#">TI 275281206</a>	IO extension SK TU4-IOE-M12
<a href="#">TI 275281256</a>	IO extension SK TU4-IOE-M12-C
<a href="#">TI 275271108</a>	24 V power supply SK CU4-24V-123
<a href="#">TI 275271109</a>	24 V power supply SK CU4-24V-140
<a href="#">TI 275281108</a>	24 V power supply SK TU4-24V-123
<a href="#">TI 275281109</a>	24 V power supply SK TU4-24V-140
<a href="#">TI 275281158</a>	24 V power supply SK TU4-24V-123-C
<a href="#">TI 275281159</a>	24 V power supply SK TU4-24V-123-C
<a href="#">TI 275271000</a>	PROFIBUS DP bus interface SK CU4-PBR
<a href="#">TI 275281000</a>	PROFIBUS DP bus interface SK TU4-PBR
<a href="#">TI 275281150</a>	PROFIBUS DP bus interface SK TU4-PBR-C
<a href="#">TI 275281200</a>	PROFIBUS DP bus interface SK TU4-PBR-M12
<a href="#">TI 275281250</a>	PROFIBUS DP bus interface SK TU4-PBR-M12-C

Document	Designation
<a href="#">TI 275271001</a>	CANopen bus interface SK CU4-CAO
<a href="#">TI 275281101</a>	CANopen bus interface SK TU4-CAO
<a href="#">TI 275281151</a>	CANopen bus interface SK TU4-CAO-C
<a href="#">TI 275281201</a>	CANopen bus interface SK TU4-CAO-M12
<a href="#">TI 275281251</a>	CANopen bus interface SK TU4-CAO-M12-C
<a href="#">TI 275271002</a>	DeviceNet bus interface SK CU4-DEV
<a href="#">TI 275281102</a>	DeviceNet bus interface SK TU4-DEV
<a href="#">TI 275281152</a>	DeviceNet bus interface SK TU4-DEV-C
<a href="#">TI 275281202</a>	DeviceNet bus interface SK TU4-DEV-M12
<a href="#">TI 275281252</a>	<b>DeviceNet bus interface SK TU4-DEV-M12-C</b>
<a href="#">TI 275271019</a>	Ethernet/IP bus interface SK CU4-EIP
<a href="#">TI 275281119</a>	Ethernet/IP bus interface SK TU4-EIP
<a href="#">TI 275281169</a>	Ethernet/IP bus interface SK TU4-EIP-C
<a href="#">TI 275271018</a>	POWERLINK bus interface SK CU4-POL
<a href="#">TI 275281118</a>	POWERLINK bus interface SK TU4-POL
<a href="#">TI 275281168</a>	POWERLINK bus interface SK TU4-POL-C
<a href="#">TI 275271015</a>	PROFINET bus interface SK CU4-PNT
<a href="#">TI 275281115</a>	PROFINET bus interface SK TU4-PNT
<a href="#">TI 275281165</a>	PROFINET bus interface SK TU4-PNT-C
<a href="#">TI 275281122</a>	PROFINET bus interface SK TU4-PNT-M12
<a href="#">TI 275281172</a>	PROFINET bus interface SK TU4-PNT-M12-C
<a href="#">TI 275271017</a>	EtherCAT bus interface SK CU4-ECT
<a href="#">TI 275281117</a>	EtherCAT bus interface SK TU4-ECT
<a href="#">TI 275281167</a>	EtherCAT bus interface SK TU4-ECT-C