

SK TI4-TU-MSW

Part number: 275 280 200

Connection unit

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions of the relevant frequency inverter and under strict compliance with the safety and warning instructions which they contain. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Scope of delivery

1 x	Connection unit	SK TI4-TU-MSW
1 x	Gasket	2 mm, self-adhesive
2 x	Lead through grommet	22 mm x 9.5 mm
4 x	Hexagonal socket screw	M4 x 20



Field of use

The connection unit forms the basis for the maintenance switch of type SK TU4-MSW-.... The connection unit can be mounted on, or in the immediate vicinity of an electronic control technology frequency inverter.

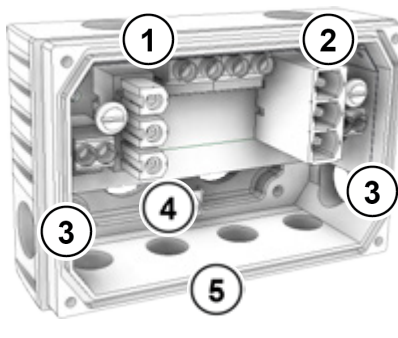
Technical data

Temperature range	-25 °C ... 50 °C
Temperature class	Class 3K3
Protection class	IP55
Vibration resistance	3M7
Dimensions [mm]	H x W x D: 95 x 136 x 55

Current rating	16 A
Cable cross section	AWG 20-10
rigid	0.5 - 6 mm ²
flexible	0.5 - 6 mm ²
Nominal voltage	1~ 100 V – 240 V 3~ 200 V – 500 V

Technical Information / Datasheet	SK TI4-TU-MSW			
Connection unit	TI 275280200	V 1.1	5115	EN

Features

1.	No function, M20 x 1,5	
2.	No function, M20 x 1,5	
3.	Cable entry M20 x 1.5 (1 on left, 1 on right, option location 5L and 5R): e.g. For the connection of control and signal lines.	
4.	Cable entry M25 x 1.5 (2 pcs.): Leadthrough for wiring between optional assembly and device (frequency inverter) with direct attachment.	
5.	Cable entry M16x1.5 (4 pcs., option location 1 to 4): e.g. for the connection of control and signal lines.	

Information

M12 connector

NORD can supply prefabricated M12 connection expansions for manufacturing plug-in connections.

These can be screwed directly into the M16 cable lead-ins. The two existing side cable lead-ins (M20) can be used if a suitable reducer is used ([TI 275274511](#)).

Installation

Installation location	To the left or right of the device. Alternatively: near by the device by using the wall mounting kit SK TIE4-WMK-TU (TI 275274002).
Mounting	Using screw connection (4 x hexagon socket M4 x 20)

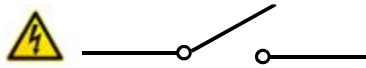 
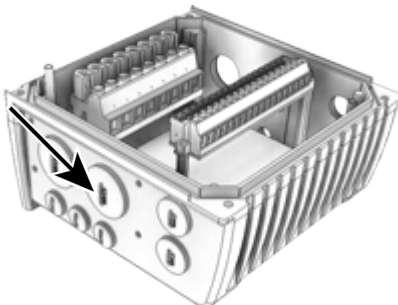
ATTENTION

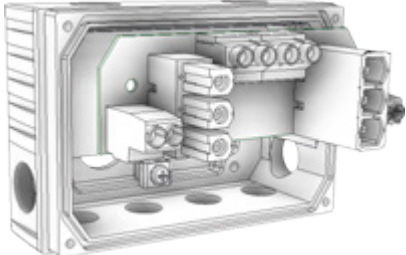
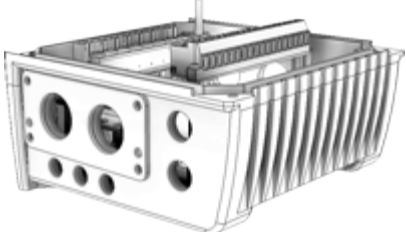
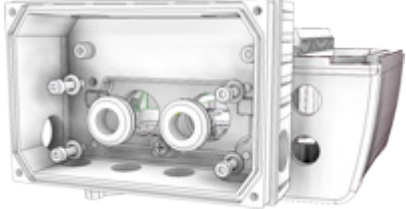
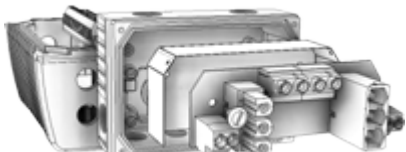
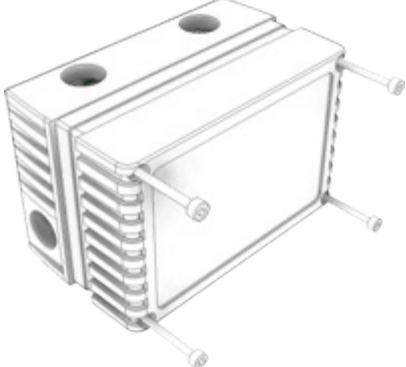
Sealing

Ensure that no leaks are present during installation (assembly, cable leadthroughs, cable glands) in order to avoid penetration by moisture and therefore the risk of corrosion and short circuiting.

Installation steps for attachment to the device



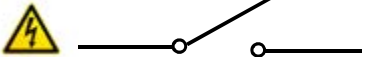 


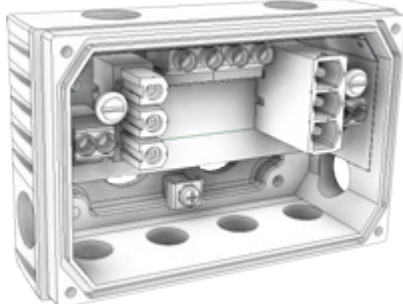
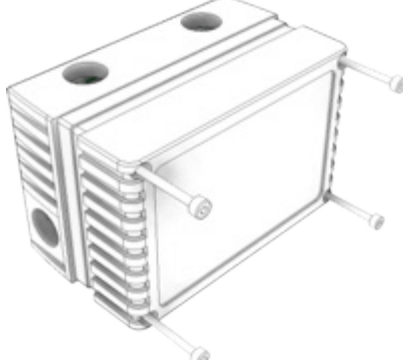
1.	Switch off the mains power.	
2.	Remove the two M25 blind caps from the relevant side of the frequency inverter (right / left).	

3.	Remove circuit board (with terminal strip) from connection unit SK TI4-TU-....	
4.	Fit provided seal to the device..	
5.	Fit SK TI4-TU-.... connection unit to device with the 4 provided screw bolts. Insert both of the provided leadthrough grommets into the M25 leadthroughs (to protect internal wiring between assembly and device).	
6.	Re-install circuit board (see point 3) and make the electrical connection.	
7.	Fit SK TU4- assembly and screw in place.	

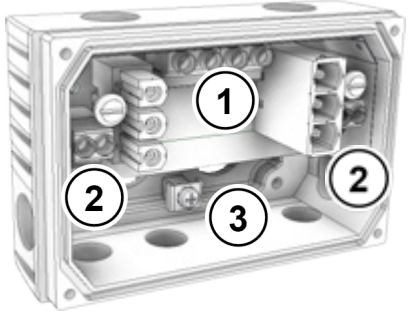
Wall mounting assembly steps

(Wall mounting kit SK TIE4-TU-WMK optionally available)



1.	Switch off the mains power.	
2.	Install provided seal to SK TI4-TU-.... connection unit.	
3.	Attach SK TI4-TU-.... connection unit to wall mounting kit. Screw the 2 cheese-head screws (wall mounting kit accessory pack) into the provided holes (countersunk) from the outside.	
4.	Insert the two screw bolts (wall mounting kit accessory pack) into the freely accessible holes in the rear panel from the inside and screw in place.	
5.	Install unit at usage location and make electrical connection (cable length max. 20 m).	
5.	Attach SK TU4- assembly and screw in place.	

Connections

1	Supply (mains)	Screw terminal with 4 contacts L1, L2, L3, PE	Depending on mains: 1~ 100 - 240 V: L1/L2 3~ 200 - 500 V: L1/L2/L3	
2	Output (device)	Screw terminal with 2 x 2 contacts L1, L2 / L3, PE	Depending on mains: 1~ 100 - 240 V: L1/L2 3~ 200 - 500 V: L1/L2/L3/PE	
3	PE connection	via housing	If fitted to the device (e.g. frequency inverter): make connection to PE of device using the provided cable (green/yellow).	

Depending on the supply network, the electrical connections at the supply and output sides must be identical.

Mains	Phase		Contact
1-phase	L1	→	L1
	N	→	L2
3-phase	L1	→	L1
	L2	→	L2
	L3	→	L3
	PE	→	PE

Additional documentation and software (www.nord.com)

Document	Name
TI 275274002	Wall mounting kit for SK TIE4-WMK-TU

Document	Meaning
Various	Data sheets for M12 - connection expansions