

SK BRW4-1-100-100

Part number: 275 273 305

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

⚠ DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

⚠ CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-1-100-100			
Brake resistor	TI 275273305	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture

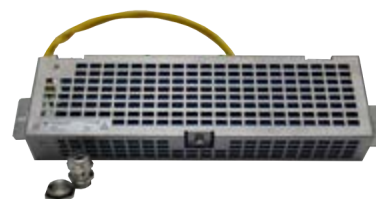


Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data

Electrical data

Number of leads		3
Resistance (GYADU)	Ω	100

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	100
Energy consumption P_{max} ¹⁾	kWs	2.2

General

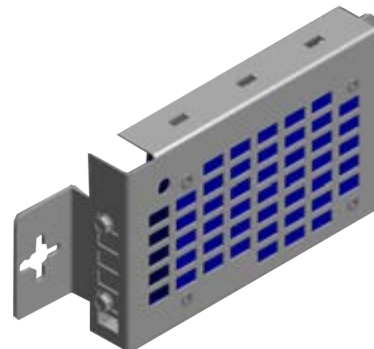
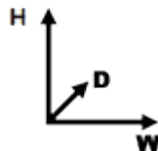
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque		
Screws		0.6 – 1.2
Cable gland M20		1.5 – 2.0
Extension M16/M20		1.5 – 2.0
Weight	kg	0.7

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾	
Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions

Envelope dimensions [mm]	W x H x D	212 x 94 x 36
Fixing dimensions [mm]	W	184
Cable / line [mm]		
Flexible strand	L	1200
Wire end sleeve	L	10



Connections


Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque			
SK 1x0E	0.5 – 0.6 Nm		
SK 2xxE	1.2 – 1.5 Nm		

Frequency inverter assignment

Information

Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.



For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation


Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied



Installation steps

1.	<p>Installing the frequency inverter</p> <p>The frequency inverter is already installed on the wall or the motor.</p>	
2.	<p>Installing the mounting bracket</p> <p>Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
3.	<p>Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	


<p>4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.</p> <p>① Green/yellow lead ⇔ PE</p> <p>② White lead ⇔ B-</p> <p>③ Grey lead ⇔ B+</p> <p>Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.</p> <p>Please heed the specified tightening torques; refer to  Technical Data – Connections.</p>	
--	--


Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

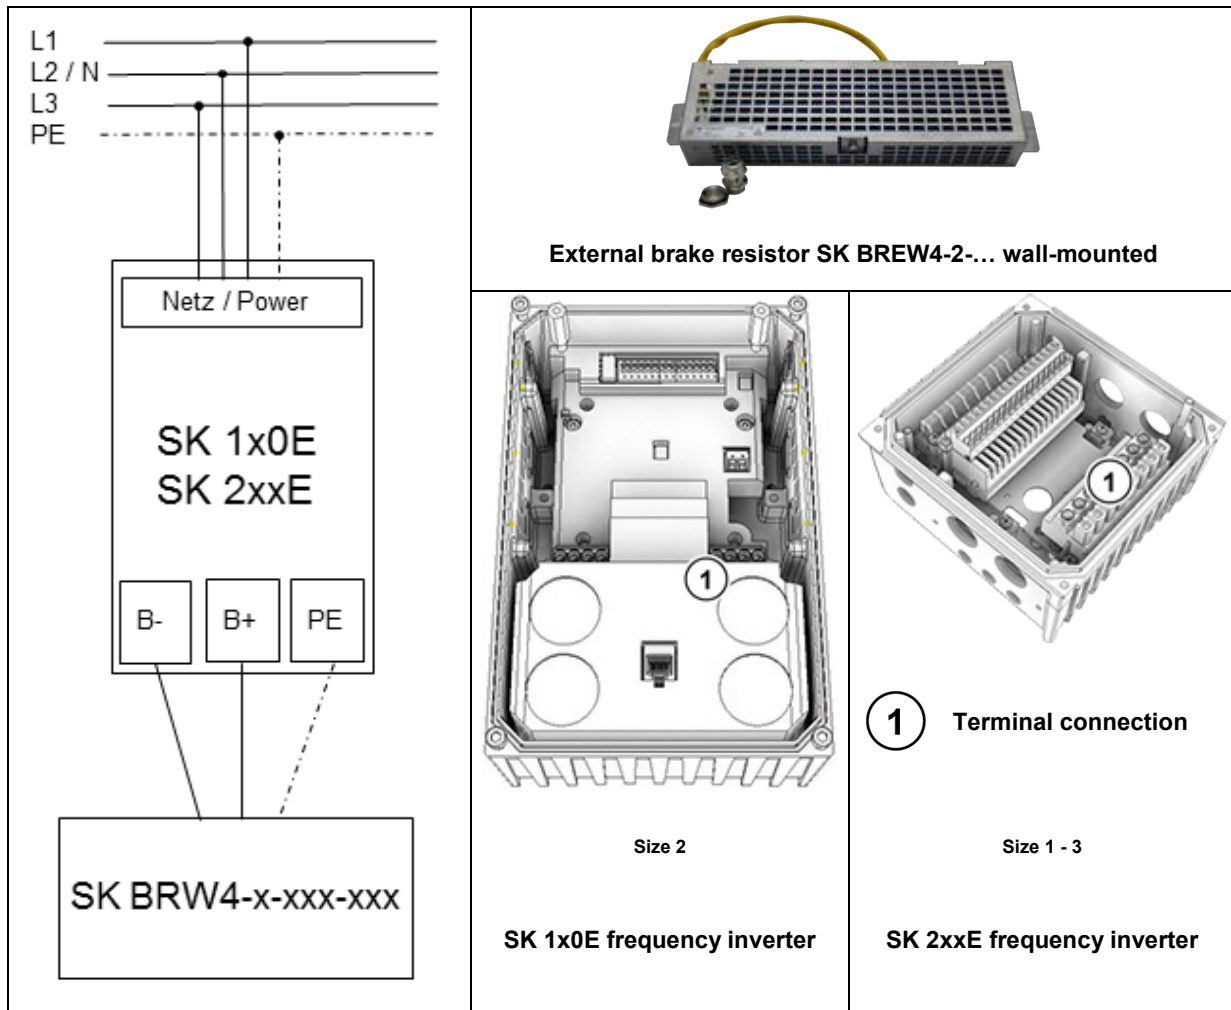
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> The error I²t limit (E003.1) is triggered. Further details  in P737. The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> Depending on the settings of parameters P556 and P557. The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> Check the function of the connected braking resistor (broken cable) Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-1-200-100

Part number: 275 273 308

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-1-200-100			
Brake resistor	TI 275273308	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture

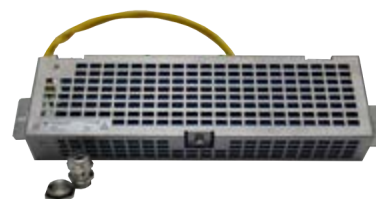


Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data
Electrical data

Number of leads		3
Resistance (GYADU)	Ω	200

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	100
Energy consumption P_{max}¹⁾	kWs	2.2

General

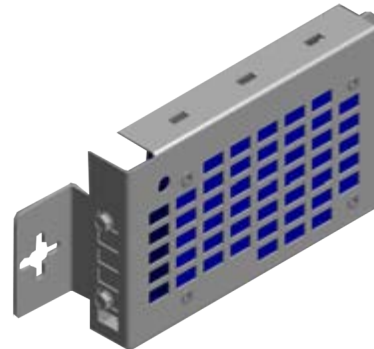
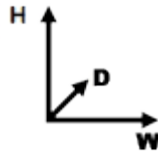
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque		
Screws		0.6 – 1.2
Cable gland M20		1.5 – 2.0
Extension M16/M20		1.5 – 2.0
Weight	kg	0.7

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting¹⁾	
Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions


Envelope dimensions [mm]	W x H x D	212 x 94 x 36
Fixing dimensions [mm]	W	184
Cable / line [mm]		
Flexible strand	L	1200
Wire end sleeve	L	10


Connections

Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque			
SK 1x0E	0.5 – 0.6 Nm		
SK 2xxE	1.2 – 1.5 Nm		

Frequency inverter assignment
 **Information**
Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.


For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation

Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied


Installation steps



1.	<p>Installing the frequency inverter</p> <p>The frequency inverter is already installed on the wall or the motor.</p>	
2.	<p>Installing the mounting bracket</p> <p>Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
3.	<p>Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	

4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.
- ① Green/yellow lead ⇔ PE
 - ② White lead ⇔ B-
 - ③ Grey lead ⇔ B+
- Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.
- Please heed the specified tightening torques; refer to  Technical Data – Connections.





Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

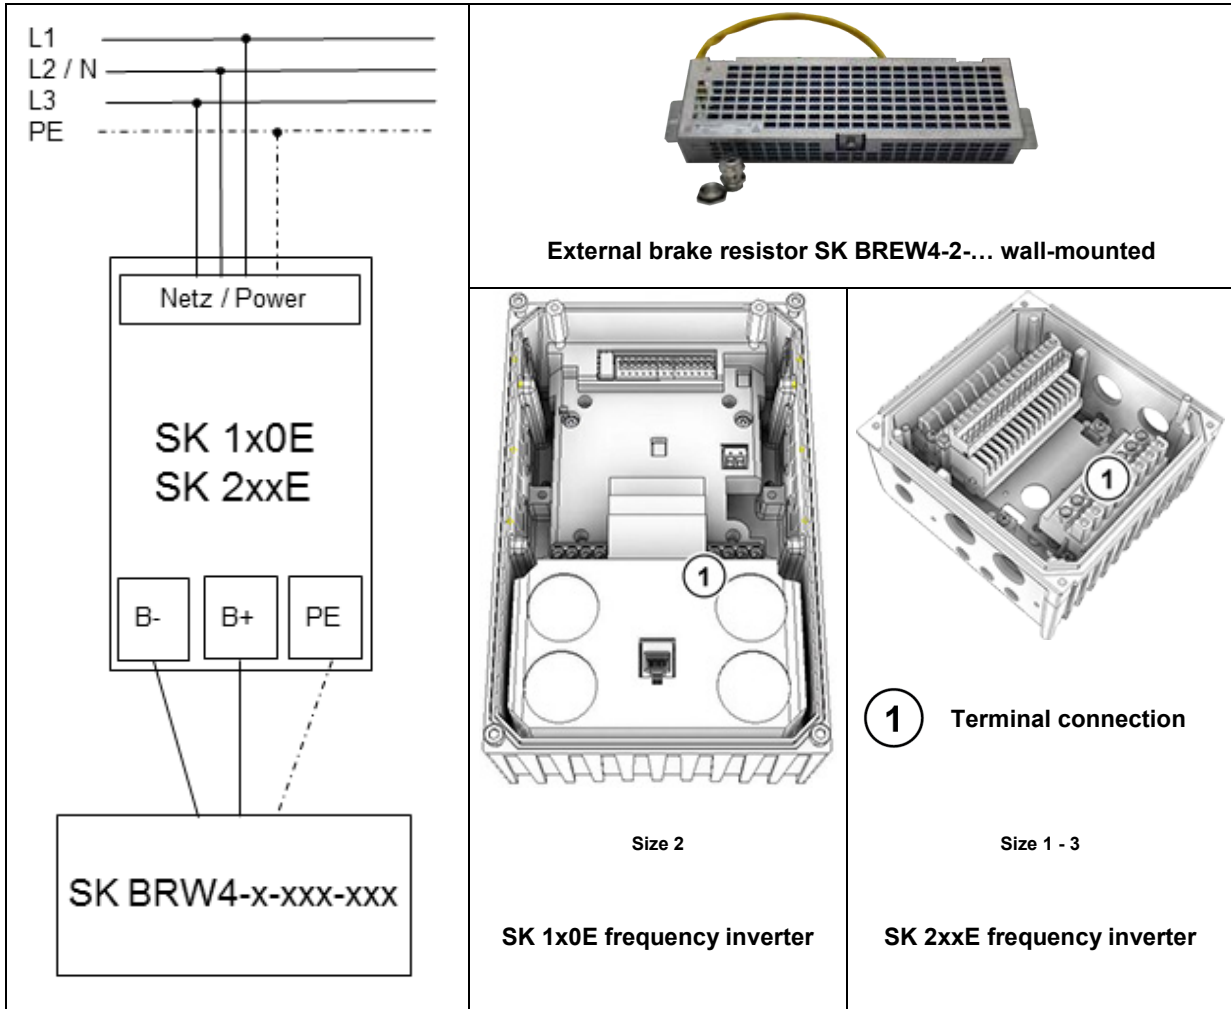
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> • The error I²t limit (E003.1) is triggered. Further details  in P737. • The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> • 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> • Depending on the settings of parameters P556 and P557. • The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> • Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> • Check the function of the connected braking resistor (broken cable) • Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-1-400-100

Part number: 275 273 312

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-1-400-100			
Brake resistor	TI 275273312	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture



Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data
Electrical data

Number of leads		3
Resistance (GYADU)	Ω	400

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	100
Energy consumption P_{max} ¹⁾	kWs	2.2

General

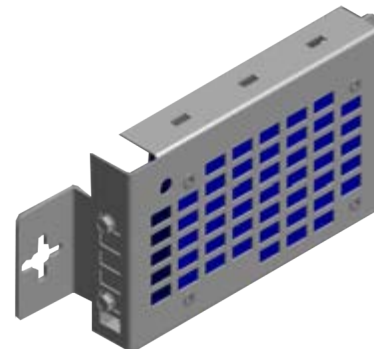
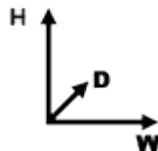
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque		
Screws		0.6 – 1.2
Cable gland M20		1.5 – 2.0
Extension M16/M20		1.5 – 2.0
Weight	kg	0.7

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾	
Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions


Envelope dimensions [mm]	W x H x D	212 x 94 x 36
Fixing dimensions [mm]	W	184
Cable / line [mm]		
Flexible strand	L	1200
Wire end sleeve	L	10


Connections

Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque			
SK 1x0E	0.5 – 0.6 Nm		
SK 2xxE	1.2 – 1.5 Nm		

Frequency inverter assignment
 Information
Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.

For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation

Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied


Installation steps

1.	<p>Installing the frequency inverter</p> <p>The frequency inverter is already installed on the wall or the motor.</p>	
2.	<p>Installing the mounting bracket</p> <p>Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
3.	<p>Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	

4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.


- ① Green/yellow lead ⇔ PE
- ② White lead ⇔ B-
- ③ Grey lead ⇔ B+



Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.

Please heed the specified tightening torques; refer to  Technical Data – Connections.





Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

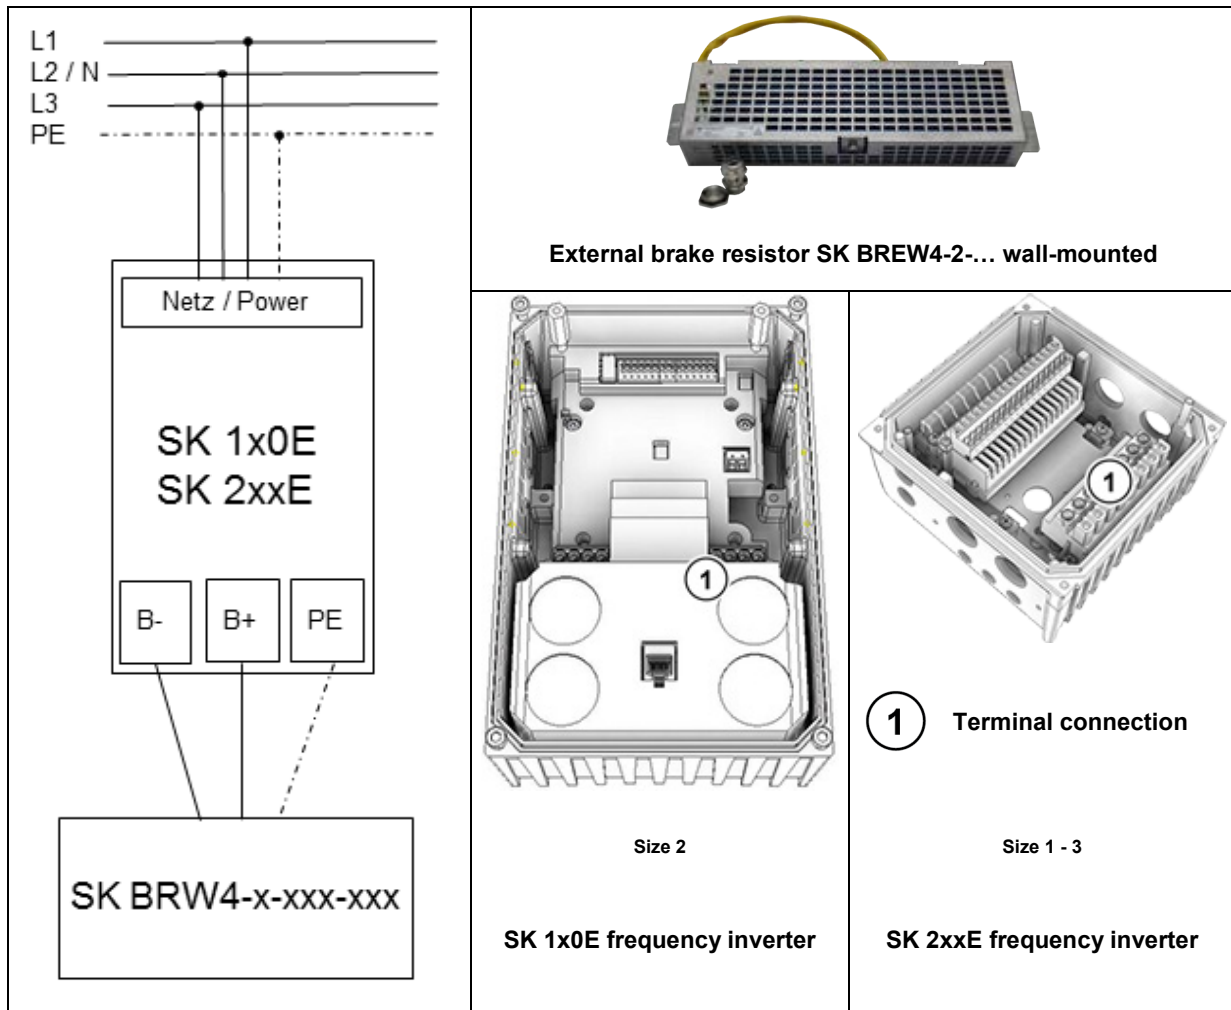
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> • The error I²t limit (E003.1) is triggered. Further details  in P737. • The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> • 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> • Depending on the settings of parameters P556 and P557. • The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> • Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> • Check the function of the connected braking resistor (broken cable) • Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-2-100-200

Part number: 275 273 405

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-2-100-200			
Brake resistor	TI 275273405	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture

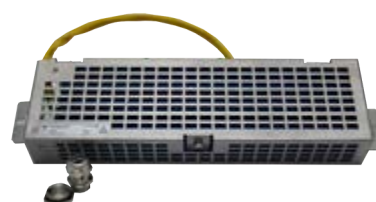


Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data
Electrical data

Number of leads		3
Resistance (GYADU)	Ω	100

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	200
Energy consumption P_{max} ¹⁾	kWs	4.4

General

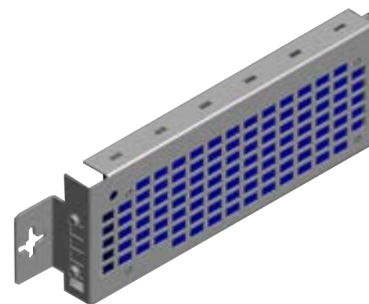
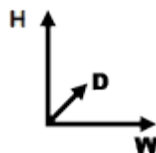
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque Spacer bolts Screws Cable gland M20 Extension M16/M20	Nm	0.5 – 2.0 0.6 – 1.2 1.5 – 2.0 1.5 – 2.0
Weight	kg	1.2

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾ Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions

Envelope dimensions [mm]	W x H x D	318 x 94 x 36
Fixing dimensions [mm]	W	290
Cable / line [mm] Flexible strand Wire end sleeve	L L	1200 10


Connections


Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque SK 1x0E SK 2xxE	0.5 – 0.6 Nm 1.2 – 1.5 Nm		

Frequency inverter assignment

i Information

Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.



For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation


Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied



Installation steps

<p>1. Installing the frequency inverter The frequency inverter is already installed on the wall or the motor.</p>	
<p>2. Installing the mounting bracket Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
<p>3. Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	


<p>4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.</p> <p>① Green/yellow lead ⇔ PE</p> <p>② White lead ⇔ B-</p> <p>③ Grey lead ⇔ B+</p> <p>Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.</p> <p>Please heed the specified tightening torques; refer to  Technical Data – Connections.</p>	
--	--


Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

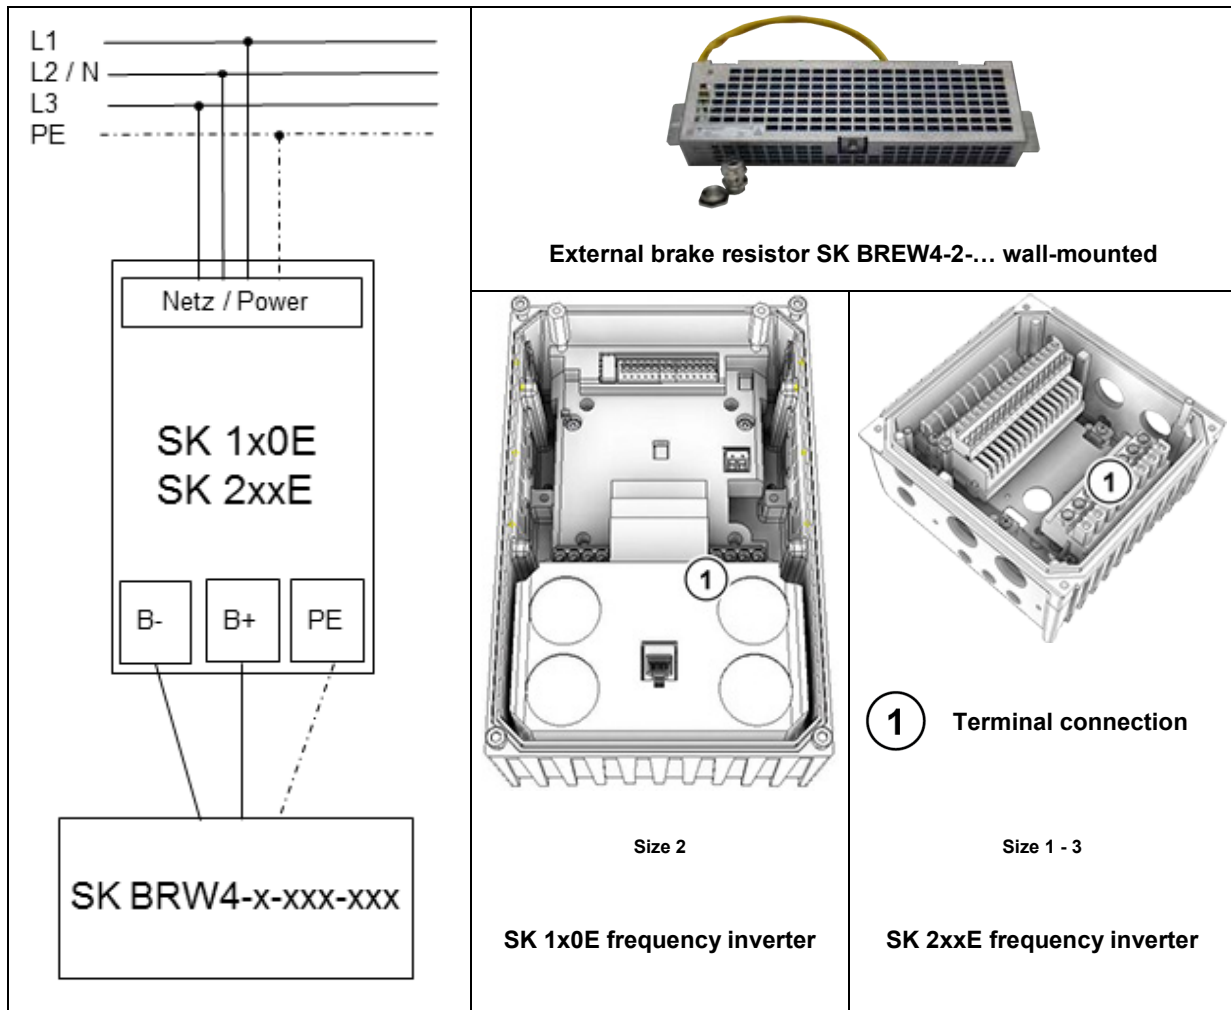
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> The error I²t limit (E003.1) is triggered. Further details  in P737. The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> Depending on the settings of parameters P556 and P557. The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> Check the function of the connected braking resistor (broken cable) Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-2-200-200

Part number: 275 273 408

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-2-200-200			
Brake resistor	TI 275273408	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture

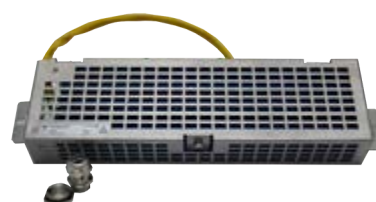


Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data
Electrical data

Number of leads		3
Resistance (GYADU)	Ω	200

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	200
Energy consumption P_{max} ¹⁾	kWs	4.4

General

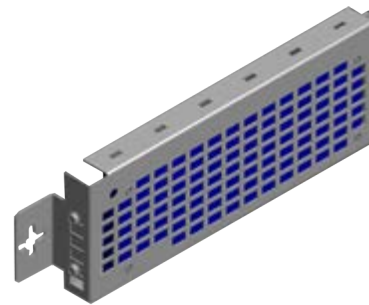
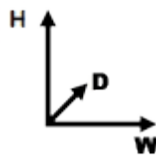
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque Spacer bolts Screws Cable gland M20 Extension M16/M20	Nm	0.5 – 2.0 0.6 – 1.2 1.5 – 2.0 1.5 – 2.0
Weight	kg	1.2

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾ Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions

Envelope dimensions [mm]	W x H x D	318 x 94 x 36
Fixing dimensions [mm]	W	290
Cable / line [mm] Flexible strand Wire end sleeve	L L	1200 10


Connections


Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque SK 1x0E SK 2xxE	0.5 – 0.6 Nm 1.2 – 1.5 Nm		

Frequency inverter assignment

i Information

Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.



For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation


Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied



Installation steps

<p>1. Installing the frequency inverter The frequency inverter is already installed on the wall or the motor.</p>	
<p>2. Installing the mounting bracket Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
<p>3. Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	


<p>4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.</p> <p>① Green/yellow lead ⇔ PE</p> <p>② White lead ⇔ B-</p> <p>③ Grey lead ⇔ B+</p> <p>Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.</p> <p>Please heed the specified tightening torques; refer to  Technical Data – Connections.</p>	
--	--


Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

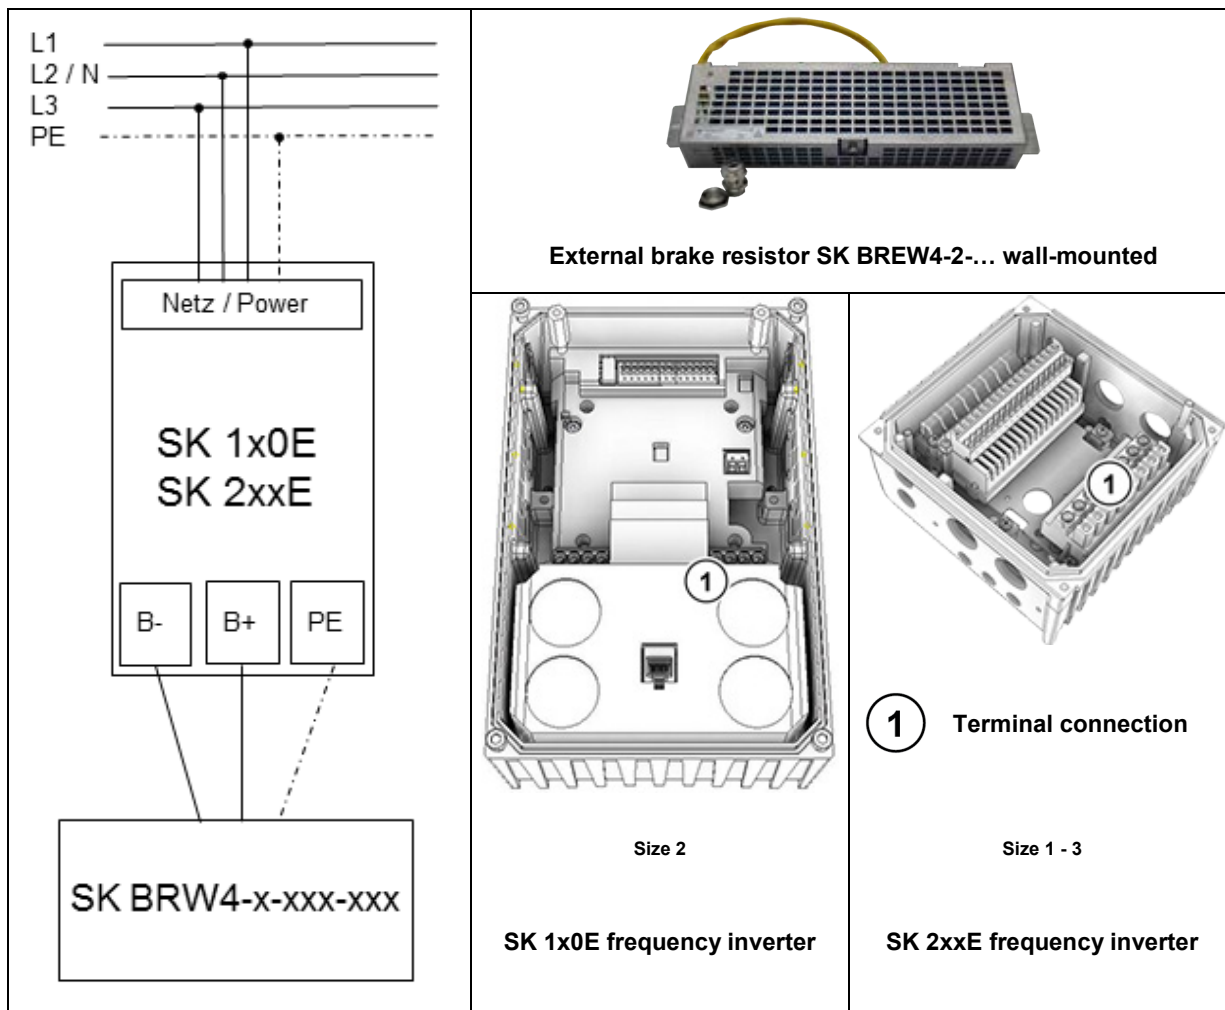
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> The error I²t limit (E003.1) is triggered. Further details  in P737. The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> Depending on the settings of parameters P556 and P557. The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> Check the function of the connected braking resistor (broken cable) Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-2-400-200

Part number: 275 273 412

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-2-400-200			
Brake resistor	TI 275273412	1.0	4117	en

Scope of delivery

Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20 x 1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture

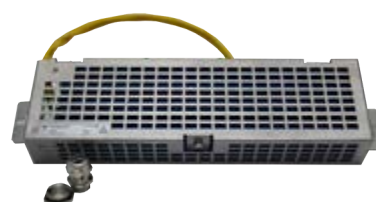


Similar to illustration

Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The braking resistor is designed for the NORDAC *BASE* SK 180E and NORDAC *FLEX* SK 200E series of units and depends on the mains voltage and the power.



Similar to illustration

Technical Data
Electrical data

Number of leads		3
Resistance (GYADU)	Ω	400

¹⁾ The value given applies to a single use within 120 s.

Max. continuous power P_n	W	200
Energy consumption P_{max} ¹⁾	kWs	4.4

General

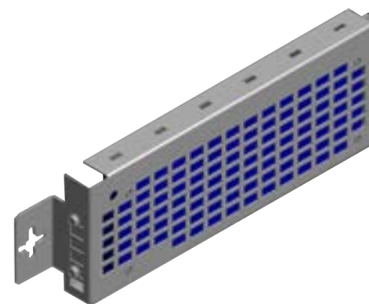
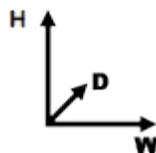
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque Spacer bolts Screws Cable gland M20 Extension M16/M20	Nm	0.5 – 2.0 0.6 – 1.2 1.5 – 2.0 1.5 – 2.0
Weight	kg	1.2

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾ Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions

Envelope dimensions [mm]	W x H x D	318 x 94 x 36
Fixing dimensions [mm]	W	290
Cable / line [mm] Flexible strand Wire end sleeve	L L	1200 10


Connections


Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque SK 1x0E SK 2xxE	0.5 – 0.6 Nm 1.2 – 1.5 Nm		

Frequency inverter assignment

i Information

Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.



For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".

Installation


Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied



Installation steps

<p>1. Installing the frequency inverter The frequency inverter is already installed on the wall or the motor.</p>	
<p>2. Installing the mounting bracket Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
<p>3. Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	


<p>4. Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.</p> <p>① Green/yellow lead ⇔ PE</p> <p>② White lead ⇔ B-</p> <p>③ Grey lead ⇔ B+</p> <p>Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing.</p> <p>Please heed the specified tightening torques; refer to  Technical Data – Connections.</p>	
--	--


Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

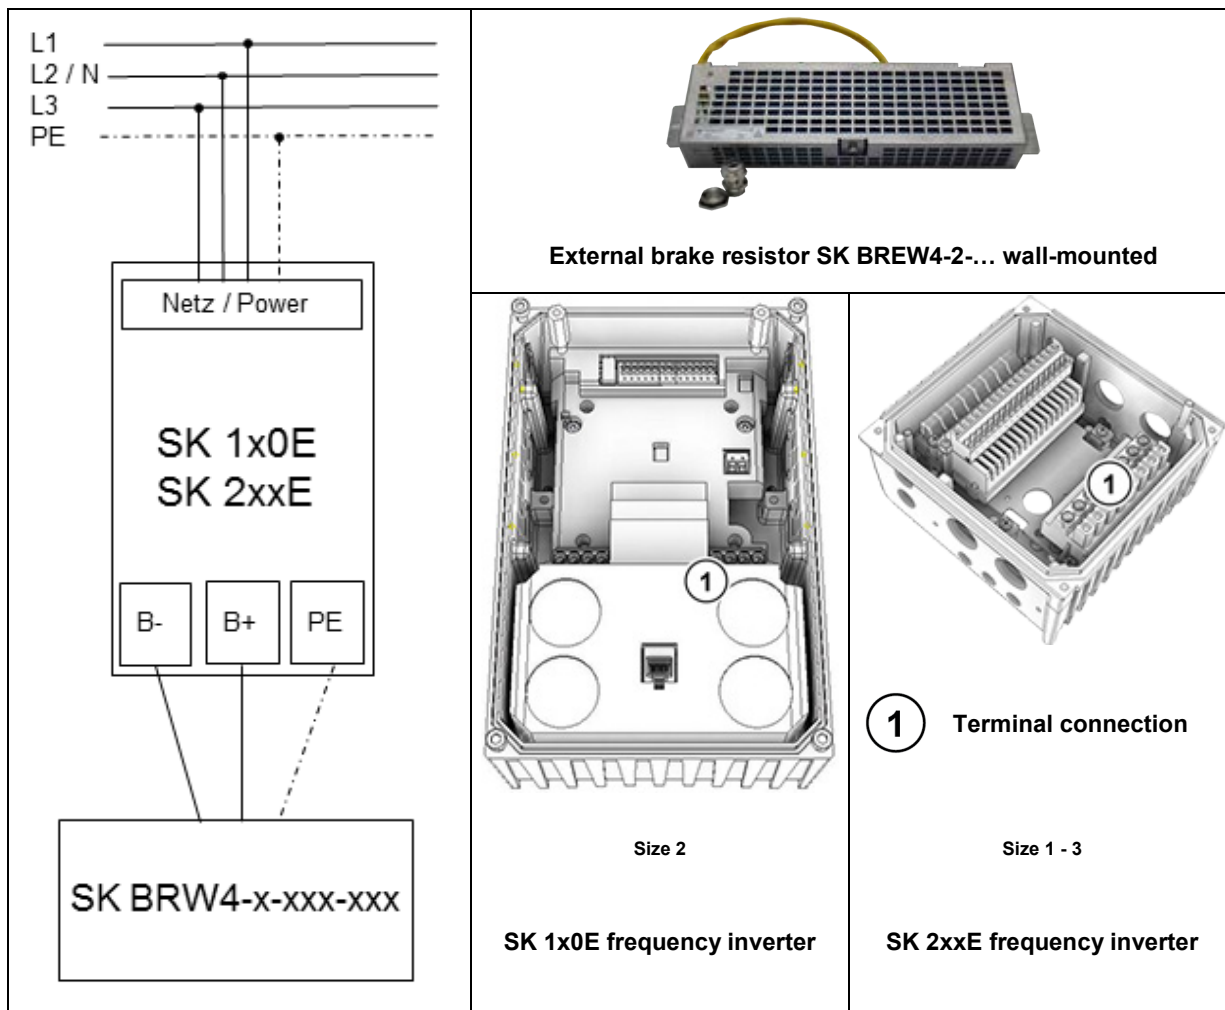
Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> The error I²t limit (E003.1) is triggered. Further details  in P737. The error I²t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> Depending on the settings of parameters P556 and P557. The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I ² t overcurrent limit	Brake chopper: I ² t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> Check the function of the connected braking resistor (broken cable) Resistance value of connected braking resistor too high

Wiring diagram



Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual

SK BRW4-3-100-450

Part number: 275 273 505

External brake resistor for direct wall mounting of decentralised frequency inverters



Only qualified electricians are allowed to install and commission the module. An electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- switching on, switching off, isolating, earthing and marking power circuits and devices,
- proper maintenance and use of protective devices in accordance with defined safety standards.

DANGER!

Danger of electric shock

The frequency inverter continues to carry hazardous voltages for up to 5 minutes after it was switched off.

- Work must not be carried out unless the device has been disconnected from the voltage and at least 5 minutes have elapsed since the mains was switched off!

CAUTION

Danger of burns

The module and all other metal components can heat up to temperatures above 70 °C.

Sufficient cooling time must be allowed for when working on the components in order to avoid injuries (local burns) to parts of the body coming into contact with the components.

In order to avoid damage to neighbouring objects, sufficient clearance must be maintained during installation.

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant frequency inverter. Safe commissioning of this module and the frequency inverter depends on the availability of this information.

Technical Information / Datasheet	SK BRW4-3-100-450			
Brake resistor	TI 275273505	1.0	4117	en

Scope of delivery

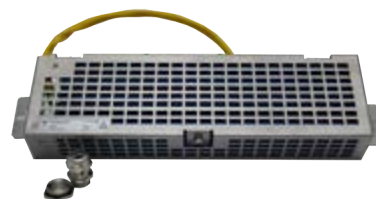
Module		
1 x	Braking resistor	Incl. guard (metal grating)
2 x	Mounting bracket	BRW
4 x	Fastening screw	M4x6
1 x	Connection reduction	M25 / M20, brass
1 x	Cable gland	M20x1.5 incl. sealing insert, brass
1 x	Connection cables	3-wire
1 x	Protective sleeve	1.0 m
1 x	Sealing ring	M20 with 3x4 mm aperture



Field of use

Dynamic braking (frequency lowering) of a three-phase motor via a frequency inverter results in generator braking energy that – depending on the application case – is dissipated by a braking resistor. This superfluous energy is transformed into heat.

The wall-mounted braking resistor is designed for the NORDAC FLEX SK 200E series of units and depends on the mains voltage and the power.



Technical Data

Electrical data

Number of leads		3
Resistance (GYADU)	Ω	100

Max. continuous power P_n	W	450
Energy consumption $P_{max}^{1)}$	kWs	3.0

¹⁾ The value given applies to a single use within 120 s.

General

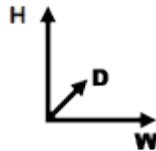
Temperature range	°C	0 ... 40 (100 % duty cycle/S1) 0 ... 50 (70 % duty cycle/S3)
Tightening torque	Nm	0.5 – 2.0 0.6 – 1.2 1.5 – 2.0 1.5 – 2.0
Spacer bolts		
Screws		
Cable gland M20		
Extension M16/M20		
Weight	kg	4.9

Certifications	CE, UR, RoHS
Protection class	IP67
Mounting ¹⁾	
Mounting bracket	2 x M4 x 6 (size 7)

¹⁾ included in the scope of supply

Dimensions

Envelope dimensions [mm]	W x H x D	418 x 103 x 65
Fixing dimensions [mm]	W	390
Cable / line [mm]	L	1200
	L	10



Connections

Name	PE connection	B-	B+
Cross section / type	AWG 14/19		
Wire colour	Green	Yellow	White
Terminal label	PE	Power terminal B-	Power terminal B+
Tightening torque SK 2xxE	1.2 – 1.5 Nm		


Frequency inverter assignment



Information

Overview in the manual



The braking resistors provided by the NORD DRIVESYSTEMS Group are directly tailored to the individual frequency inverters. However, when external braking resistors are being used, it is usually possible to select between 2 or 3 alternatives.

For detailed information, please refer to chapter  Electric data for brake resistors of the respective frequency inverter manual "Further documentation and software: www.nord.com".


Installation



Installation location	Direct installation on the wall, with connecting cable for connection to a decentralised frequency inverter: <ul style="list-style-type: none"> In the vicinity of the frequency inverter
Installation orientation	any
Fastening	With screw fastenings <ul style="list-style-type: none"> Screws for wall mounting are not supplied

Installation steps


<p>1.</p>	<p>Installing the frequency inverter The frequency inverter is already installed on the wall or the motor.</p>	
<p>2.</p>	<p>Installing the mounting bracket Fasten the two mounting brackets with the 4 supplied M4 screws to the right and to the left side of the brake resistor.</p> <ul style="list-style-type: none"> Fasten laterally to the brake resistor with two of the four supplied M4 fastening screws. <p>Then fasten the brake resistor directly on the wall or the mounting surface in a correct manner with 2 fastening screws to be provided separately.</p> <ul style="list-style-type: none"> 1 screw for each mounting bracket 	
<p>3.</p>	<p>Route the connecting cable into the frequency inverter through one of the M256 openings.</p> <ul style="list-style-type: none"> Caution: Replace the clamping seal of the cable gland with the black sealing insert Fit the M25/M20 cable gland reduction (preferably option slot 3AR, alternatively 3AL) Insert the connecting cable through the M20 cable gland Route the three leads of the cable through the black sealing insert Then route the leads into the terminal box/housing of the frequency inverter Screw an M20 cable gland into the M25/M20 cable gland reduction <p>Make sure the gland is tight and tighten it to the specified torque (see  Technical Data – General).</p>	
<p>4.</p>	<p>Connect the connecting cable to the respective terminal strip or the terminals of the frequency inverter.</p> <ol style="list-style-type: none"> Green/yellow lead ⇔ PE White lead ⇔ B- Grey lead ⇔ B+ <p>Connect the PE lead to the PE lug of frequency inverter inside the terminal box or at the housing. Please heed the specified tightening torques; refer to  Technical Data – Connections.</p>	


Parameters

Frequency inverter: The following parameters of the frequency inverter have to be set for optimum brake resistor operation. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

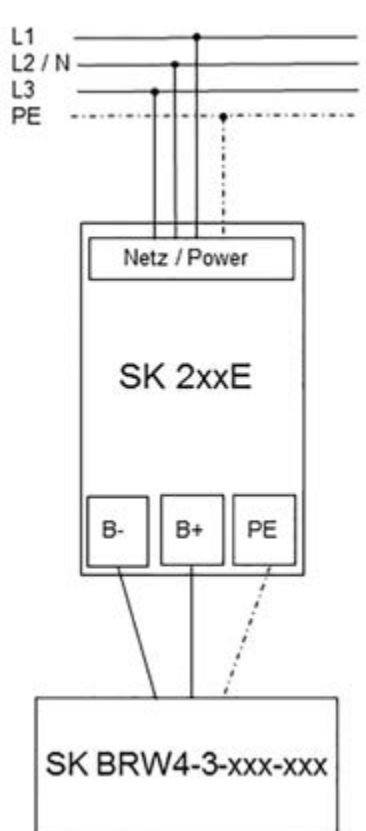


Parameters	Meaning	Remarks
P556	Braking resistor	Value of the brake resistance for the calculation of the maximum brake power to protect the resistor. <ul style="list-style-type: none"> The error I^2t limit (E003.1) is triggered. Further details  in P737. The error I^2t limit (E003.1) is triggered. Further details  in P737.
P557	Braking resistor type	Continuous power (nominal power) of the resistor, to display the actual utilisation in P737. For a correctly calculated value, the correct value must be entered into P556 and P557. <ul style="list-style-type: none"> 0.00 = Off, monitoring disabled
P737	Usage rate brake res.	This parameter provides information about the actual degree of modulation of the brake chopper or the current utilisation of the braking resistor in generator mode. <ul style="list-style-type: none"> Depending on the settings of parameters P556 and P557. The resistance power is displayed if both parameters are set correctly.

Error messages

Error messages of the braking resistor – the current or the archived message of the last fault – can be retrieved by way of the information parameters Actual fault P700 and Last fault P701 from the error memory of the frequency inverter. For details, refer to the frequency inverter manual  "Further documentation and software: www.nord.com".

Error (E030/E050)	Meaning	Remarks
3.1	I^2t overcurrent limit	Brake chopper: I^2t limit has been triggered, 1.5-fold value for 60 s reached ( P556, P557) <ul style="list-style-type: none"> Avoid overcurrent in brake resistance
5.0	Overvoltage UZW	Link circuit voltage too high <ul style="list-style-type: none"> Check the function of the connected braking resistor (broken cable) Resistance value of connected braking resistor too high

Wiring diagram

	 <p style="text-align: center;">External brake resistor SK BREW4-3-... wall-mounted</p>  <p style="text-align: center;">Terminal connection</p> <p style="text-align: center;">Size 4</p> <p style="text-align: center;">SK 2xxE frequency inverter</p>
--	--

Further documentation and software: www.nord.com

Document	Name
BU_0180	SK 180E – SK 190E frequency inverter manual

Document	Name
BU_0200	SK 200E frequency inverter manual